


# OPERATING THE ELECTRIC RANGE WORKSHEET

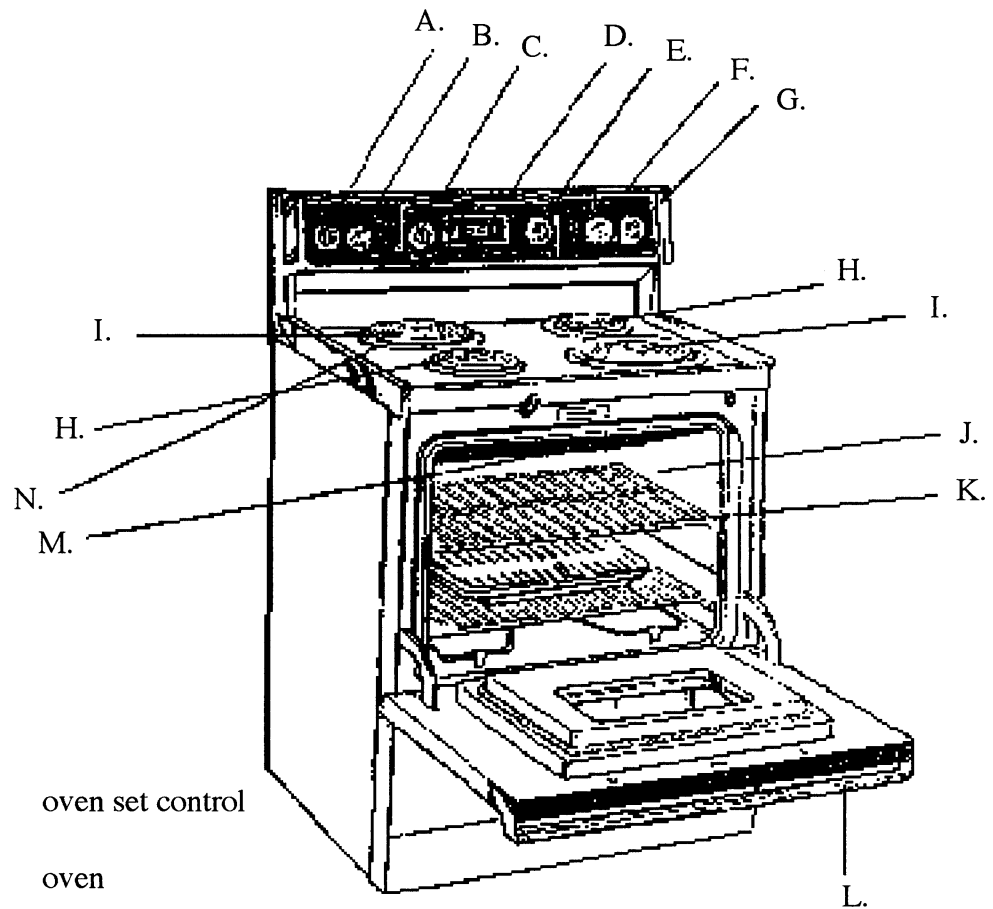


1.   C   oven set control
2.   J   oven
3.   E   oven temperature control
4.   M   broiler unit
5.   D   oven timer, clock and minute timer
6.   I   large surface burners
7.   L   oven light switch
8.   F   rear right surface unit control
9.   H   small surface burners
10.   K   adjustable oven racks
11.   B   rear left surface unit control
12.   G   front right surface control
13.   A   front left surface unit control
14.   N   chrome plated trim rings and drip pans

15. Which knob(s) do you turn to set the oven to bake cookies at 375°?  
\_\_\_\_\_
16. Which knob(s) do you turn to set the broiler at broil?  
\_\_\_\_\_
17. The surface unit control knob can be adjusted to the following temperatures to cook on top of the stove: \_\_\_\_\_  
\_\_\_\_\_ and \_\_\_\_\_.
18. In order to operate the burner knob, you must \_\_\_\_\_ in before turning for safety reasons.

19. SET THE OVEN TO BAKE OR BROIL ON THE FOLLOWING TEMPERATURES:

TEMPERATURE	DATE:	DATE:	DATE:
200°	_____	_____	_____
425°	_____	_____	_____
350°	_____	_____	_____
375°	_____	_____	_____
400°	_____	_____	_____
325°	_____	_____	_____
250°	_____	_____	_____
300°	_____	_____	_____
225°	_____	_____	_____
275°	_____	_____	_____
broil	_____	_____	_____
% correct	_____	_____	_____

# OPERATING THE ELECTRIC RANGE WORKSHEET

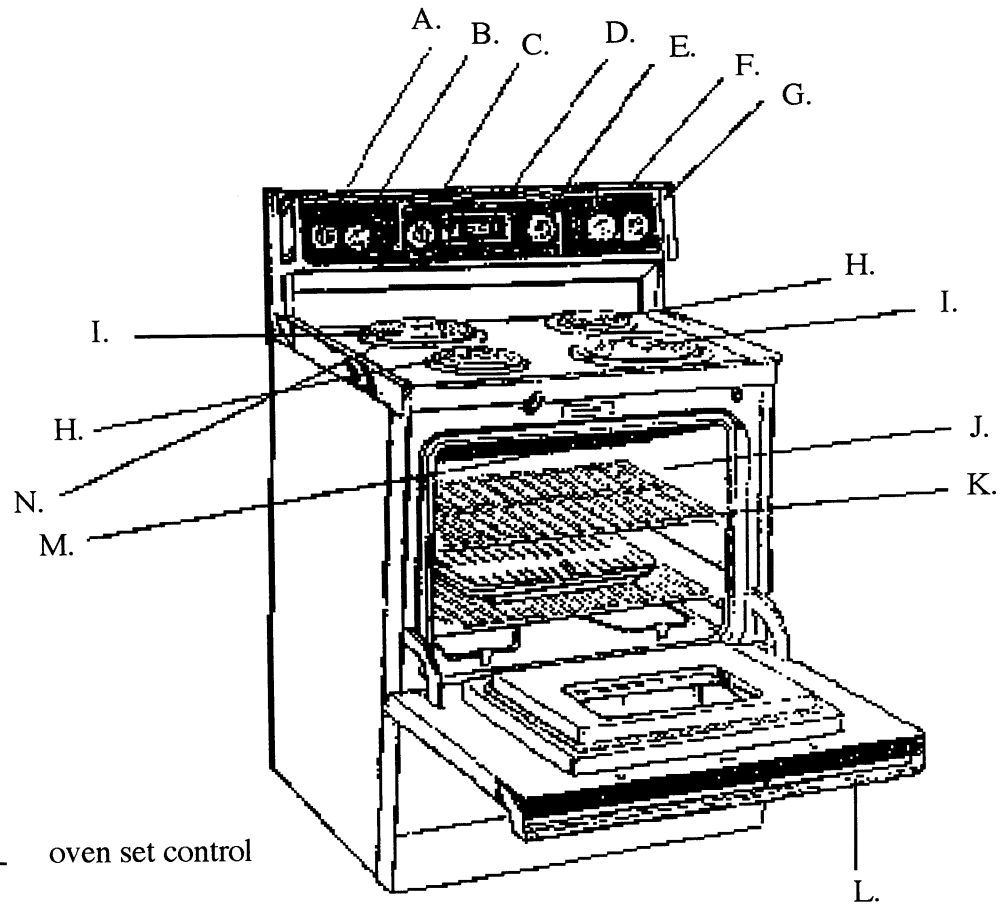

1. \_\_\_\_\_ oven set control
2. \_\_\_\_\_ oven
3. \_\_\_\_\_ oven temperature control
4. \_\_\_\_\_ broiler unit
5. \_\_\_\_\_ oven timer, clock and minute timer
6. \_\_\_\_\_ large surface burners
7. \_\_\_\_\_ oven light switch
8. \_\_\_\_\_ rear right surface unit control
9. \_\_\_\_\_ small surface burners
10. \_\_\_\_\_ adjustable oven racks
11. \_\_\_\_\_ rear left surface unit control
12. \_\_\_\_\_ front right surface control
13. \_\_\_\_\_ front left surface unit control
14. \_\_\_\_\_ chrome plated trim rings and drip pans

15. Which knob(s) do you turn to set the oven to bake cookies at 375°?  
Oven set control - bake, oven temp. control - 375°.
16. Which knob(s) do you turn to set the broiler at broil?  
Oven set control - Broil, oven temp. control - Broil.
17. The surface unit control knob can be adjusted to the following temperatures to cook on top of the stove: warm, low, medium, medium high, and high.
18. In order to operate the burner knob, you must push in before turning for safety reasons.
19. SET THE OVEN TO BAKE OR BROIL ON THE FOLLOWING TEMPERATURES:

TEMPERATURE	DATE:	DATE:	DATE:
200°			
425 °	_____	_____	_____
350 °	_____	_____	_____
375 °	_____	_____	_____
400 °	_____	_____	_____
325 °	_____	_____	_____
250 °	_____	_____	_____
300 °	_____	_____	_____
225 °	_____	_____	_____
275 °	_____	_____	_____
broil	_____	_____	_____

% correct